

1x



2x



2x



www.elotouch.com

Quick Installation Guide

Magnetic Stripe Reader

Revision B
P/N E001008

Elo Touch Solutions Technical Support

Online self-help:
www.support.elotouch.com

North America

800-ELO-TOUCH
Tel +1 408 597 8000
Fax +1 408 597 8050
EloSales.NA@elotouch.com

Europe

Tel +32 (0)16 70 45 00
Fax +32 (0)16 70 45 49
elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385
Fax +86 (21) 3329 1400
EloAsia@elotouch.com

Latin America

Tel 786-923-0251
Fax 305-931-0124
EloSales.LATAM@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.


Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.

© 2017 Elo Touch Solutions, Inc. All rights reserved.




Installation


Please go to www.elotouch.com/support to verify you have the latest drivers before installing this device.

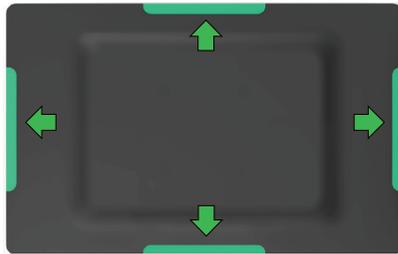

Select the location to mount the MSR. Some systems have more than one mounting option.

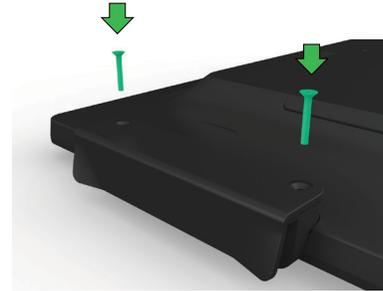


Install the 2 flat head screws included with the kit.

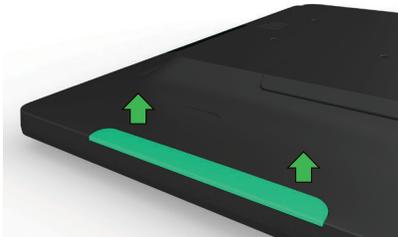

Remove the selected peripheral cover from the display head to expose the peripheral bay.



Remove the protective film from the included mylar covers and place the covers over the screws.

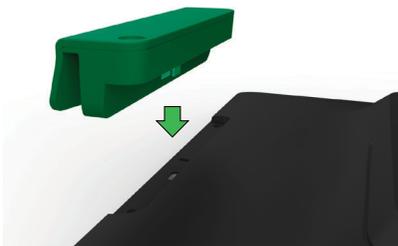

Gently press the MSR into the peripheral bay making sure the connector is mated.